



MOTOSTART

S805 Bluetooth® DJ Headphones

Get Connected in 5 Quick Steps

- 1 - CHARGE
- 2 - START
BLUETOOTH
FEATURE
- 3 - PAIR WITH
PHONE
- 4 - PAIR WITH
AUDIO
DEVICE
- 5 - TEST AND
USE

 


USING THE S805

Before using this product, read the Important Safety and Legal Information pamphlet and follow its instructions.

You can use your S805 DJ Headphones simultaneously with your Bluetooth audio device and your Bluetooth cell phone.


Listen to music, hear a ring, and transfer to take the call on the headphones. Hang up the call with a push of a button and your music automatically continues playing.

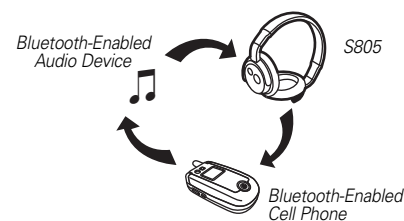

Your S805 supports both Handsfree (HFP) and Headset Bluetooth profiles for calls, and Advanced Audio Distribution (A2DP) and Audio Video Remote Control (AVRCP) profiles for wireless, streaming music.

①

 CHARGE Your Headphones' Battery

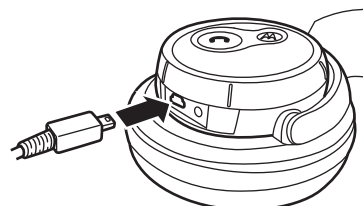

- 1 Plug the Motorola charger into the end of the headphones.

Both and indicator lights turn on when the battery is charging. It may take up to 1 minute for the indicator lights to turn on. When the headphones' battery is fully charged (about 3 hours), the indicator lights turn off.

- 2 Disconnect the charger

Note: Headphones are not functional while charging.

②

START BLUETOOTH FEATURE Your Phone

Your phone's Bluetooth feature is off by default. To use your headphones, you must turn on the Bluetooth feature in your phone.

For most Motorola phones (at the main menu):

- 1 Press (Menu) > **Settings** > **Connection** > **Bluetooth Link** > **Setup**.
- 2 Scroll to **Power**.
- 3 Select **Change**.
- 4 Scroll to **On**.
- 5 Press **Select** to turn on the Bluetooth feature. The Bluetooth feature remains on until you turn the feature off.

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide.

③

PAIR Your Headphones and Phone

Before you can use your headphones, you must pair (link) them with your phone first.

Step A - PUT THE HEADPHONES IN PAIRING MODE

- 1 Ensure the headphones are turned off (indicator light not blinking).
- 2 Press and hold button. After about 6 seconds, the indicator light becomes steadily lit.
- 3 Release the button. The indicator light remains steadily lit.

If the indicator light is flashing or not steadily lit, repeat **steps 1 through 3** on this page.

③

PAIR CONTINUED Your Phone and Headphones

Step B - SET YOUR PHONE TO LOOK FOR YOUR HEADPHONES

For most Motorola phones:

- 1 On your Motorola phone, press (Menu) > **Settings** > **Connection** > **Bluetooth Link** > **Handsfree** > **Look for Devices**.
- 2 Select **Motorola S805**.
- 3 Select **OK** or **Yes** to pair your headphones with your phone.
- 4 Enter the passkey: **0000**
- 5 Select **OK**.

When your headphones successfully pair with your phone, the indicator light changes from steadily lit to rapidly flashing.

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide.

④

PAIR Your Audio Device and Headphones

To use your headphones for streaming audio, you must pair them with your audio device.

Step A - PUT THE HEADPHONES IN PAIRING MODE

Place your headphones in pairing mode. See step A under **③ PAIR Your Headphones and Phone** for details on putting your S805 in pairing mode.

Step B - PUT YOUR AUDIO DEVICE IN PAIRING MODE

Place your Bluetooth audio device in pairing mode. See your Bluetooth audio device's user documentation for details on putting device in pairing mode.

Step C - PAIR DEVICES

Place headphones and audio device close together while in pairing mode.

When your headphones pair successfully with your audio device, the indicator light changes from steadily lit to rapidly flashing.

⑤

TEST AND USE

Verify your **headphones and audio device** work together:

- 1 Place the headphones on your head.
- 2 Start playing music on the audio device.

If your headphones and audio device are successfully paired, you will hear music on your headphones.

Verify your **headphones and phone** work together:

- 1 Place the headphones on your head.
- 2 On your phone, dial the number you want to call and press the **Send** key.

If your headphones and phone are successfully paired, you will hear ringing on your headphones.

After you have successfully paired your headphones and Bluetooth devices, you don't need to repeat steps in this guide.

TROUBLESHOOTING

My phone does not find my headphones.

Make sure the indicator light on your headphones is on and steady when your phone is searching for devices (see step 3).

My headphones worked with my phone before but now their not working.

Make sure your phone is on and the Bluetooth feature is turned on in your phone (see step 2). If the Bluetooth feature has been turned off or was turned on only temporarily, you may need to restart the Bluetooth feature (see step 2). If you have confirmed the Bluetooth feature is on in your phone, pair your phone and headphones again (see step 3).

Support.

If you need more help, contact us at **1-877-MOTOBLU** or visit us at www.hellomoto.com/bluetooth and click **Support**.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com
1-877-MOTOBLU
1-888-390-6456 (TTY/TDD United States for hearing impaired)

Guide Number: 6809500A86-O

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2006.

Features and Functions Guide

S805
Bluetooth®
DJ Headphones



IMPORTANT:

Be sure to first follow the

MOTOSTART

Quick Start Guide

on the reverse side
of this guide
to complete initial setup
of your S805.

 
S805 OPERATION

To turn your S805 headphones on, press and hold until the indicator light flashes twice. Then, release the button.

To turn your S805 headphones off, press and hold until the indicator light flashes three times and then turns off.

- When the Bluetooth connection is between the S805 and a phone using Handsfree Profile (HFP) (for call management), only the indicator light is lit.
- When the Bluetooth connection involves Advanced Audio Distribution (A2DP) (for streaming audio), both and indicator lights are lit.
- To disable the indicator lights, long press and buttons at the same time. To reenable the indicator lights, also long press and buttons at the same time, turn the S805 off and on, or plug charger into the S805.

MUSIC CONTROLS (RIGHT POD)

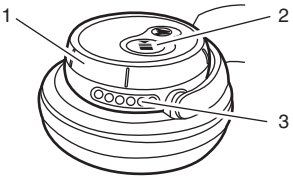


(1) Track Control Wheel. Allows you to skip forward to the next music track, or skip to the previous music track.

(2) Play/Pause/Stop Button and Indicator Light . Allows you to play, pause, or stop music when listening to music over a Bluetooth connection using A2DP and AVRCP profiles. For audio played back through a wired (non-Bluetooth) connection, this button allows mute/unmute of incoming audio. In a call via Bluetooth (Handsfree profile), this button allows mute/unmute of the microphone.

(3) Microphone. Used when playing or receiving calls.

CALL CONTROLS (LEFT POD)

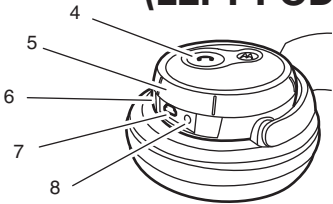

(4) Call Button and Indicator Light . Used to answer and end calls. Also used to turn S805 on and off.

(5) Volume Control Wheel. Allows you to increase or decrease for music or calls.

(6) Grommet. Flexible rubber flap used to cover headphones jack and charging port.

(7) Charging Port. When charging, one end of the charger should be inserted into this port.

(8) Headphones Jack. Allows you to connect to a non-Bluetooth music source. When using such a device as a music source, plug in one end of the included cable into the music source, and the other end into this receptacle.

INDICATOR LIGHTS

The indicator light provides information about your S805 headphones status.

With the Charger Plugged In

Indicator	Status
On (steady)	Charging
Off	Charging complete

With No Charger Plugged In

Indicator	Status
Off	Power off
On (steady)	Pairing mode
10 rapid flashes	Pairing successful
Slow pulse	Connected (on a call)
Quick flash	Standby (not on call)

AUDIO TONES

The audio tones provide information about your S805 headphones status.

Audio Tone	Status
Single high tone when turning Volume Control Wheel	Volume at minimum or maximum
Five rapid high tones repeated every 60 sec.	Low battery
No audio indications; deteriorating quality	Out of range
Ring tone	Incoming call
Single high tone	Pairing confirmation/end call
Single low tone	Voice activation
Two tones	Mute on/off
Series of ascending tones	Power on
Series of descending tones	Power off

Note: While streaming music wirelessly, the low battery tone is played only once.

PLAYING MUSIC

Bluetooth (Wireless) Music Source

Function	Action
Play or Pause music	Short press
Stop music	Long press
Adjust music volume	Turn Volume Control Wheel (on left pod) forward (to increase volume) or backward (to decrease volume)
Skip back to previous song	Turn Track Control Wheel (on right pod) all the way backward and release
Skip forward to next song	Turn Track Control Wheel (on right pod) all the way forward and release

Non-Bluetooth (Wired) Music Source

Function	Action
Mute/unmute music	Short press

MAKING CALLS

Function	Action
Make a voice dial call	Short press and speak the name after the tone
Make a hand dial call from phone	Enter phone number and press Send key
End a call	Short press
Receive a call	Short press
Reject a call	Long press
Redial last call (Voice Dialing ON)	Long press
Redial last call (Voice Dialing OFF)	Short press to recall last number, Short press again to dial last number

Note: Your S805 headphones support both Handsfree and Headset Profiles. Accessing call functions depends upon which profile your phone supports. See your phone's user's guide for more information.

MAKING CALLS *CONTINUED*

Function	Action
Answer a second incoming call	Long press (places first call on hold)
Toggle between two active calls	Long press (places active call on hold, activates holding call)
Join a 3-way call	Long press and at same time
Put an active call on hold or resume a call on hold	Long press
Mute or unmute a call	Short press

Note: Some features are phone/network dependent.

Note: When placing or receiving calls, music playing from a Bluetooth-enabled device is automatically paused. When the call is finished, the music playing is resumed. Music playing from a non-Bluetooth music source is muted when placing or receiving calls, and unmuted when the call is finished.

Note: You can control the volume while in a call by rotating the Volume Control Wheel on the left speaker pod.